

User's Manual

JOHANNUS

Opus 5, 10, 20 and 30
AGO

Document information

Document Code	OPUSV202AG.wpd
Document Title	User's Manual JOHANNUS Opus 5, 10, 20 and 30 AGO
Issue date	February 1999
Serial number	

© Copyright 1998 JOHANNUS Orgelbouw The Netherlands

All rights reserved. No part of this publication may be reproduced and/or published by print, microfilm, audiotape, electronically, mechanically or any other means, or stored in an information retrieval system, without prior written permission from JOHANNUS Orgelbouw.

The information in this document is subject to change without notice and should not be considered a commitment by Johannus Orgelbouw b.v. No responsibility is assumed for any error which may be appear in this document.

Introduction

Congratulations on your decision to purchase a new JOHANNUS organ. You are now the owner of an instrument with a well-chosen and balanced selection of stops. This organ gives you the opportunity to perform the full repertoire of classical and liturgical organ music.

This User's Manual contains a lot of useful information. First we present an overview of the organ, and then we present tips on use. Finally, we investigate all of your organ's technical possibilities, including how to choose another temperament, using free combinations, MIDI applications and so on.

In the appendices you will find options, technical information, MIDI implementation charts and registration examples.

Table of Contents

An overview	1
The organ cabinetry	1
The console	1
The music rack	1
The roll-top	1
The pedalboard	2
The organ bench	2
Set up	3
Connecting the organ	3
Switching on the organ	3
The console in detail	4
Overview of the controls per type	4
Opus 5 AGO	4
Opus 10 and 20 AGO	5
Opus 30 AGO	6
Accessories	7
Couplers	7
Tremulants	7
Tremolo (optional)	8
Chorus	8
Intonation 2	8
MIDI-tabs	8
Display	8
Stops	9
Flue pipes	9
Reeds	9
Special voices (optional)	10
Overview of stops per type	10
Volume adjustment	11
VOLUME control	11
Expression pedal Great + Pedal	11
Expression pedal Swell + Choir	11
Thumb pistons	11
WM = Werckmeister	11
MT = Meantone	11
MB = Manual Bass	11
CF = Cantus Firmus	11
FA = Fix Accessories (Freeze Accessories)	11
SET	12
1 thru 8	12
- and +	12
PGM = Program General Crescendo	12
PP thru T	12
0	12
RO = reeds off	13
S/S = All swells to swell	13
Controls	13
PITCH	13
TRANSPOSER	13
ACOUSTICS	13
Memory lock	13
MEMORY LOCK	13

Toe Studs	13
External connections	14
MIDI IN	14
MIDI MOD.	14
MIDI SEQ.	14
AUX IN	14
AUX OUT	14
EXT. REV.	15
PHONES	15
Choice of temperament	16
Equal temperament	16
Werckmeister III temperament	16
Meantone temperament	16
Using free combinations (capture system)	17
What are free combinations?	17
How to set free combinations	17
Recalling the free combinations	18
Using the General Crescendo	19
MIDI applications	20
What is MIDI?	20
How and what to connect?	20
Programmable MIDI	21
Program MIDI manually	21
Program MIDI into capture system	22
External Loudspeaker system	25
3-position switch	25
Maintenance	26
Guarantee	26
Appendices	27
Technical specifications	27
Technical specifications cabinet	28
MIDI Implementation charts	29
OPUS 5 AGO	29
OPUS 10 AGO	30
OPUS 20 AGO	31
OPUS 30 AGO	32
Registration examples	33
Registration examples Opus 5 AGO	33
Personal registrations Opus 5 AGO	34
Registration examples Opus 10 AGO	35
Personal registrations Opus 10 AGO	36
Registration examples Opus 20 AGO	37
Personal registrations Opus 20 AGO	38
Registration examples Opus 30 AGO	39
Personal registrations Opus 30 AGO	40

An overview

The organ cabinetry

The organ cabinet consists of the console shell, music-rack, pedalboard and bench. Our standard organ cabinet is designed in dark or light oak with solid wood panels. Your organ may be custom-ordered in another finish, color or wood.

The console

Typically, the console consists of two or three manuals and several accessories. The keyboards have a church organ touch and are normally designed with synthetic key surfaces. You may custom-order wooden keys. For more information, read "The console in detail".

The music rack

The music rack is typically not yet installed at the time of delivery. You can insert the music rack into the groove provided on the top panel of the organ cabinet.

The roll-top

The wooden roll-top cover is provided with a lock and key. The lock is placed behind the music-rack on the top of the organ.

Open the organ in the following way:

1. Put the key in the lock.
2. Rotate the key a quarter turn; the lock moves upwards.
3. Push the roll-top upwards.

Lock the organ in the following way:

1. Make certain that you have the key handy (see warning).
2. Pull at the roll-top toward you.
3. Push in the cover-lock.

Warning

You **can** lock the organ without using the key. However, the key is necessary to open the organ. Therefore, always take care that the key is not left within the console before depressing the lock.

The pedalboard

Typically, AGO (American Guild of Organists) organs have a 32-note AGO pedalboard.

The pedalboard is removable. At the front of each pedal key is a magnet. This magnet normally sits in close proximity to a reed switch, which is invisibly mounted behind the black painted front panel at the bottom of the console. When you depress a pedal key, the reed switch is activated by the magnet at the end of the key.

Your new organ has lighting above the pedalboard which is switched on and off automatically with the organ.

The following points are important for installing the pedalboard:

1. Make sure that the surface under the console in combination with the pedalboard is flat.
2. For the best alignment of the pedalboard, it may be necessary to adjust the console height slightly while positioning the pedalboard.
3. Shift the pedalboard against the black painted front panel as close as possible.

The organ bench

Your organ is provided with a bench that contains a music shelf. If you wish, you can order an adjustable-height bench.

Set up

Connecting the organ

Pay close attention to the following points when you connect the organ:

1. Check the main voltage before you connect the organ. This voltage must be the voltage as printed on the serial numberplate located on the left side under the keyboards.
2. Connect the organ to a grounded outlet. When this is not possible there is a chance some functions will not work properly.

Switching on the organ

Switch on the organ by depressing the main power switch located on the right side of the keyboards. The red pilot lamp will light up as soon as the organ is switched on. It takes a few seconds before all controls are working. The computer circuit needs this time to initialize.

The display of the organ (located on the right side next to the keyboards) will show the figure 1.


Also the '0' thumb pistons will light up. (On the Opus 5 AGO, the SET piston will light up too.)

The console in detail

Overview of the controls per type

The number and the location of the controls are different by type. The following pages show controls of the different Opus AGO models.


Opus 5 AGO

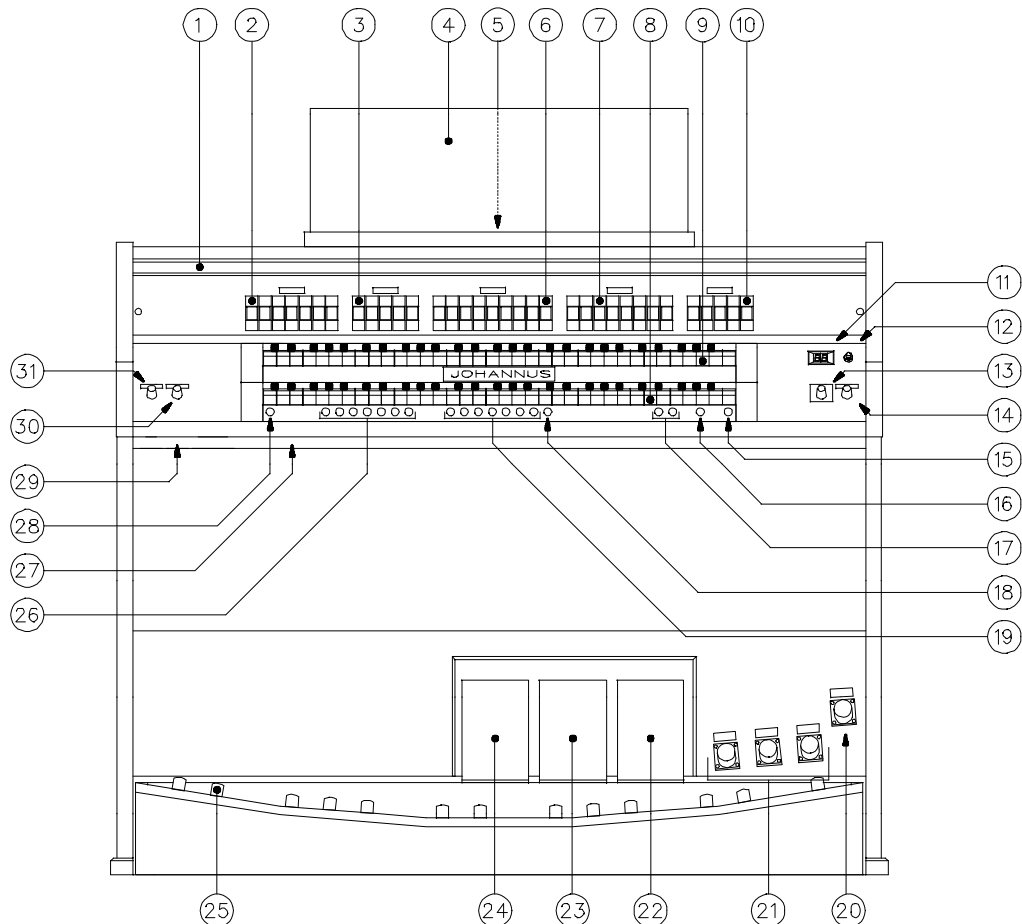

- | | | |
|------------------------|---------------------------------------|----------------------------------|
| 1. Roll-top cover | 14. PITCH control | 21. Toe studs couplers |
| 2. Accessories | 15. Thumb piston | 22. General crescendo pedal |
| 3. PEDAL stops | • 0 (Cancel/undo) | 23. Expression pedal Swell |
| 4. Music rack | 16. Thumb piston | 24. Expression pedal Great+Pedal |
| 5. Roll-top cover lock | • PGM (Program. Gen. cresc. and MIDI) | 25. Pedal |
| 6. SWELL stops | 17. Thumb pistons | 26. Thumb pistons |
| 7. GREAT stops | • – (min) | • 1 thru 7 |
| 8. Great keyboard | • + (plus) | 27. Serial number plate |
| 9. Swell keyboard | 18. Thumb piston | 28. Thumb piston |
| 10. Special voices | • MB (Manual Bass) | • SET |
| 11. Display | 19. Thumb piston | 29. External connections |
| 12. Power switch | • Presets | 30. ACOUSTICS control |
| 13. TRANSPOSER control | 20. Toe stud Tutti | 31. VOLUME control |


Opus 10 and 20 AGO

The Opus 20 AGO has more stops than the Opus 10 AGO. De location of the controls is the same.

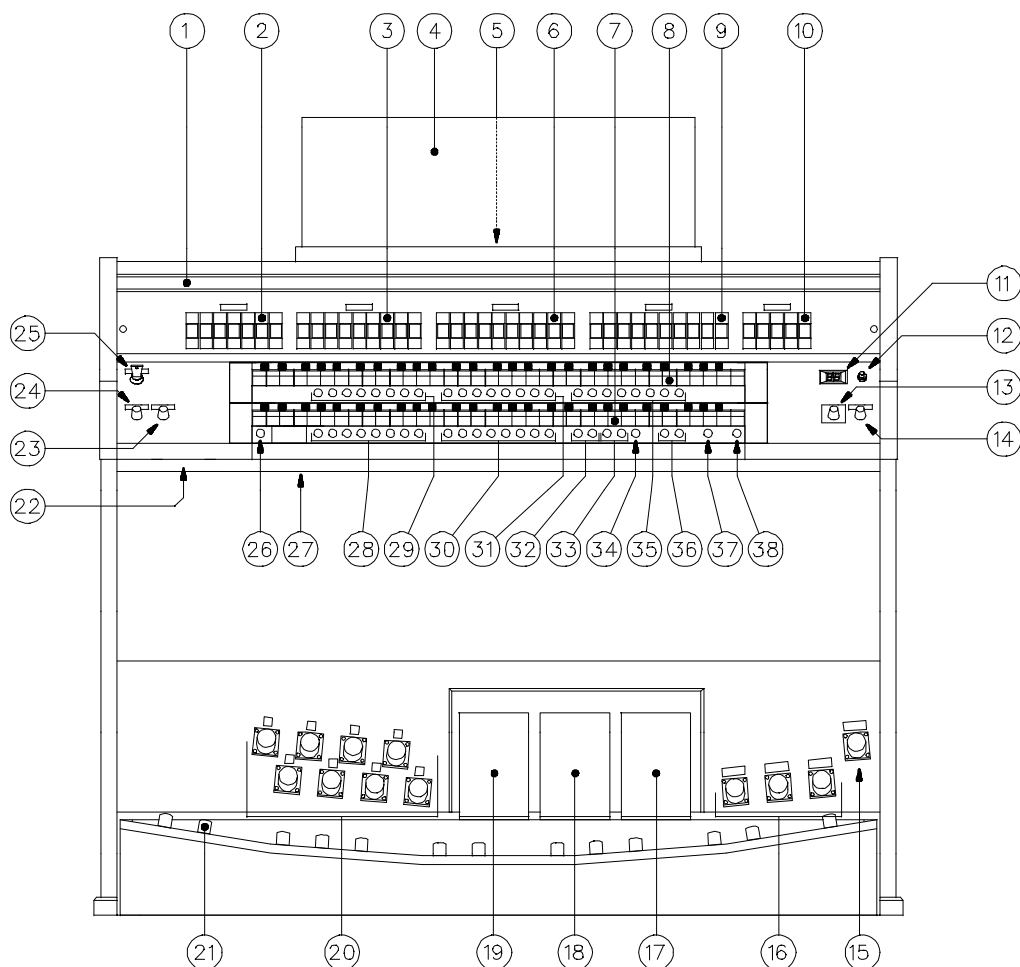

- | | | |
|-----------------------------|----------------------------------|---------------------------------------|
| 1. Roll-top cover | 19. Expression pedal Great+Pedal | 32. Thumb pistons |
| 2. Accessories | 20. Toe studs capture | • WM (Werckmeister) |
| 3. PEDAL stops | 21. Pedal | • MT (Meantone) |
| 4. Music Rack | 22. External connections | 33. Thumb pistons |
| 5. Roll-top cover lock | 23. ACOUSTICS control | • MB (Manual Bass) |
| 6. SWELL stops | 24. VOLUME control | • CF (Cantus Firmus) |
| 7. Great keyboard | 25. Key switch MEMORY LOCK | 34. Thumb piston |
| 8. Swell keyboard | 26. Thumb piston | • FA (Fix Accessories) |
| 9. GREAT stops | • SET | 35. Thumb pistons |
| 10. Special voices | 27. Serial number plate | • Presets |
| 11. Display | 28. Thumb pistons | 36. Thumb pistons |
| 12. Power switch | • 1 - 8 Pedal division | • - (min) |
| 13. TRANSPOSER control | 29. Thumb pistons | • + (plus) |
| 14. PITCH control | • 1 - 8 Generals | 37. Thumb piston |
| 15. Toe stud Tutti | 30. Thumb pistons | • PGM (Program. Gen. cresc. and MIDI) |
| 16. Toe studs couplers | • 1 - 8 Great division | 38. Thumb piston |
| 17. General crescendo pedal | 31. Thumb pistons | • 0 (Cancel/undo) |
| 18. Expression pedal Swell | • 1 - 8 Swell division | |

Opus 30 AGO

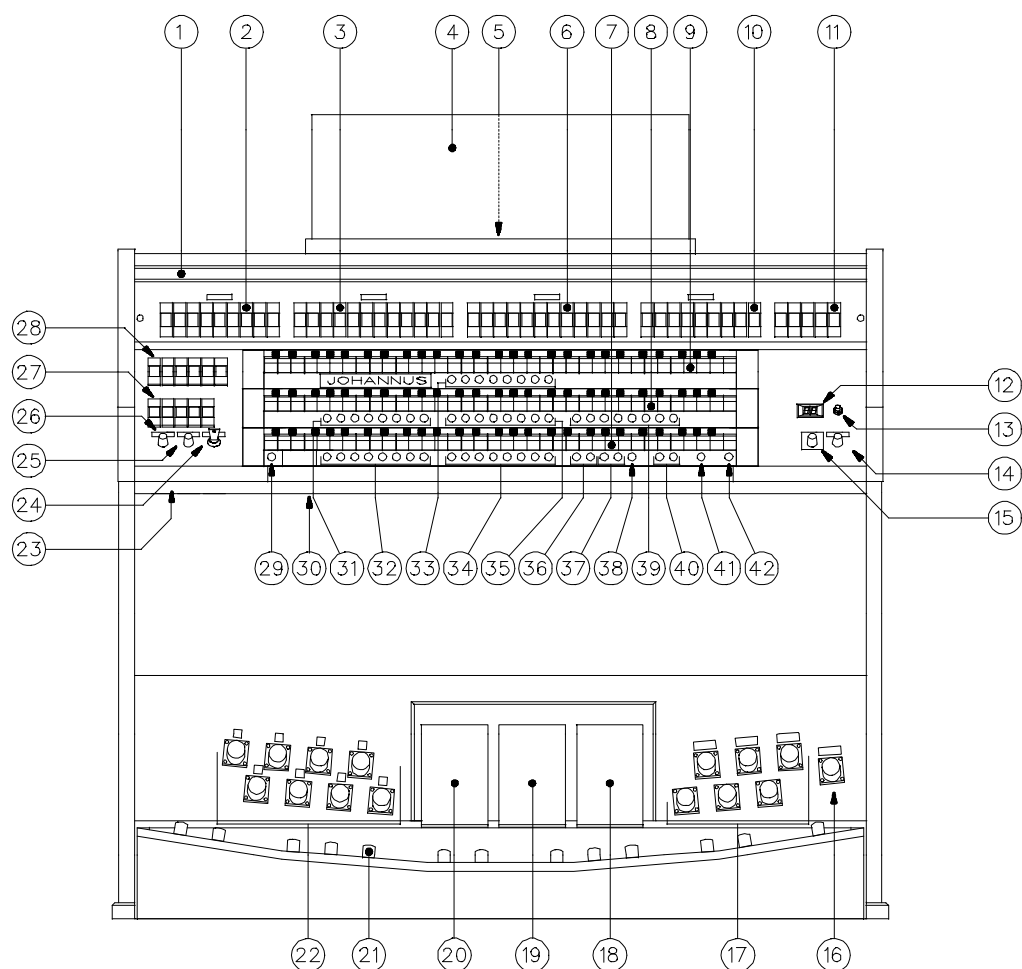

- | | | |
|----------------------------------|----------------------------|---------------------------------------|
| 1. Roll-top cover | 21. Pedal | 35. Thumb pistons |
| 2. PEDAL stops | 22. Toe studs capture | • 1 - 8 Great division |
| 3. SWELL stops | 23. External connections | 36. Thumb pistons |
| 4. Music Rack | 24. Key switch MEMORY LOCK | • WM (Werckmeister) |
| 5. Roll-top cover lock | 25. ACOUSTICS control | • MT (Meantone) |
| 6. GREAT stops | 26. VOLUME control | 37. Thumb pistons |
| 7. Choir keyboard | 27. Accessories | • MB (Manual Bass) |
| 8. Great keyboard | 28. Couplers | • CF (Cantus Firmus) |
| 9. Swell keyboard | 29. Thumb piston | 38. Thumb piston |
| 10. CHOIR stops | • SET | • FA (Fix Accessories) |
| 11. Special voices | 30. Serial number plate | 39. Thumb pistons |
| 12. Display | 31. Thumb pistons | • Presets |
| 13. Power switch | • 1 - 8 Generals | 40. Thumb pistons |
| 14. PITCH control | 32. Thumb pistons | • – (min) |
| 15. TRANSPOSER control | • 1 - 8 Pedal division | • + (plus) |
| 16. Toe stud Tutti | 33. Thumb pistons | 41. Thumb piston |
| 17. Toe studs couplers | • 1 - 8 Swell division | • PGM (Program. Gen. cresc. and MIDI) |
| 18. General crescendo pedal | 34. Thumb pistons | 42. Thumb piston |
| 19. Expression pedal Choir+Swell | • 1 - 8 Choir division | • 0 (Cancel/undo) |
| 20. Expression pedal Great+Pedal | | |

Accessories

The following accessories are standard:

- Couplers
- Tremulants
- Tremolo
- Chorus
- Intonation 2
- MIDI-stops

Couplers

All couplers are full unison couplers. This means all depressed keys are coupled.

Choir - Great (only for Opus 30 AGO)

This coupler couples the Choir to the Great. When playing keys on the Great, the corresponding keys on the Choir will be played as well. This way you can add all stops of the Choir to the Great.

Swell - Great

This coupler couples the Swell to the Great. When playing keys on the Great, the corresponding keys on the Swell will be played as well. This way you can add all stops of the Swell to the Great.

Swell - Choir (Only for Opus 30 AGO)

This coupler couples the Swell to the Choir. When playing keys on the Choir, the corresponding keys on the Swell will be played as well. This way you can add all stops of the Swell to the Choir.

Choir - Pedal (Only for Opus 30 AGO)

This coupler couples the Choir to the Pedal. When playing keys on the Pedal, the corresponding keys on the Choir will be played as well. This way you can add all stops of the Choir to the Pedal.

Great - Pedal

This coupler couples the Great to the Pedal. When playing keys on the Pedal, the corresponding keys on the Great will be played as well. This way you can add all stops of the Great to the Pedal.

Swell - Pedal

This coupler couples the Swell to the Pedal. When playing keys on the Pedal, the corresponding keys on the Swell will be played as well. This way you can add all stops of the Swell to the Pedal.

Tremulants

The tremulants are meant to vibrate the sound of the organ especially with slow or soft music. Every division has its own independent tremulant.

When you use couplers and/or the CF piston the tremulants will be coupled to the corresponding keyboards.

Tremolo (optional)

The Gospel Organ stop has its own independent tremolo. This special stop belongs to the swell division (Opus 5/10/20 AGO) or to the choir division (Opus 30 AGO).

When you use couplers (and/or the CF piston on the Sweelinck 5/10/20 AGO) the Gospel Organ Tremolo will be coupled to the corresponding keyboards.

Chorus

To avoid the organ sounding too sterile, the instrument is designed with various stops tuned differently in relation to each other. These small differences give the organ a broader, more lively character. Switching on this stop will intensify the difference in tuning between the various voices.

Intonation 2

Intonation determines the sound of the organ. In pipe organ-building the voicing is a very important part of the building process. Every stop will be adjusted note by note to the room where the organ is installed.

Your organ has two intonations, a romantic and a baroque intonation. In general a romantic organ is wider and sounds symphonic, while a baroque organ is brighter and more tightly tuned. Also see under "Choice of temperament".

MIDI-tabs

The programmable MIDI-tabs are a special group of accessories. See under "MIDI applications" and "Programmable MIDI".

Display

A so-called 7-segment display is located on the right side next to the keyboards. This display has several functions:

When the PGM thumb piston is not switched on the display will show the chosen memory group of the capture system. Also see under "Using free combinations (capture system)".

When the PGM thumb piston is switched on, the display will show the required data for programming the MIDI-tabs. See under "Programmable MIDI".

Stops

The stops are on so-called tab stops. These are switches that will come back in their middle position after being switched on or off. Therefore, in every tab a light will light up when that stop is switched on. These stop lights also work with the use of presets and free combinations.

The last stop of each group is a MIDI-stop. For the use of these stops see chapter "MIDI applications".

On a pipe organ you switch a rank of pipes on or off with the stops. By varying the combinations of stops the organist can create dynamic and colorful changes. This means that some knowledge of the traditional pipe organ is necessary to make good stop combinations. You should know a little bit about the different sounds of the different organ stops. That is why we give a brief explanation about these different kinds of organ stops.

In the appendices you will find extensive examples of registrations.

Organ pipes can be divided in two main groups:

- Flues
- Reeds

Flue pipes

Flue pipes occur in two versions: open or (half) stopped. An example of a half-stopped pipe is the Rohrflute. On the canister-stopper a small open tube has been soldered. An example of an open flue pipe is the Principal. Normally the pipes of this stop are located in the facade of a pipe organ. Flues can be subdivided in the following categories:

Principals

Principals are the Principal, Octave, Twelfth, Superoctave, Mixture, Scharff, Cymbal, Rauschpfeife and Sesquialter. The last 5 stops sound with more than one pipe of different pitch together per note. So called multi rank stops.

Strings

These are the narrow scaled, open flue pipes like: Viola di gamba, Vox Celeste and Salicional.

Flutes

Flute stops, open as well as stopped, are made of metal or wood. For example: Stopped Flute, Gedackt, Bourdon, Subbass, Nazard, Waldflute, Gemshorn and Rohrflute.

Reeds

In a reed pipe the wind is blown into the pipe bringing a reed into resonance. This resonance is 'amplified' and 'colored' by a tube (resonator). Reeds with a conical resonator are: Bombarde, Trumpet, Schalmey, etc. The group of cylindrical resonators are: Fagotto, Cromorne, Krummhorn, etc. The following reeds have a short resonator: Regal, Vox Humana, Ranket, etc.

Special voices (optional)

Except the characteristic pipe organ voices, the organ also has four special voices. Although these special voices are no standard pipe organ voices, nevertheless they can be seen as an enrichment of your organ.

On the Opus 5/10/20 AGO, the Chimes, the Harpsichord, the Strings and the Gospel Organ are added to the Swell division.

On the Opus 30 AGO, the Chimes, the Harpsichord, the Strings and the Gospel Organ are added to the Choir division.

Overview of stops per type

You will find an overview of stops per organ in the appendix under examples of registrations. Next to the stopnames you normally find the length, e.g. 8'. This means that the body of this pipe for the lowest C key is 8' (appr. 240 cm). A stop with 16' sounds one octave lower.

Volume adjustment

The volume is adjustable in the following ways:

VOLUME control

With the VOLUME control you adjust the General Volume, independent of the position of the expression pedals. Therefore, this control has influence on each keyboard.

Expression pedal Great + Pedal

With the left expression pedal you adjust the Great and Pedal volume at the same time.

Expression pedal Swell + Choir

With the right expression pedal you adjust the volume of the Swell and Choir at the same time (the last part for Opus 30 AGO only).

Both expression pedals work independently of the position of the VOLUME control.

Thumb pistons

The thumb pistons are switches that after being switched on or off remain in the same position. Therefore, every thumb piston has a light built in that lights as soon as it is switched on.

WM = Werckmeister

By pushing this piston you choose for the Werckmeister temperament. See under chapter "Choice of temperament". As soon as you switch on this temperament the Meantone temperament will be switched off automatically in case it was on.

By pushing the WM thumb piston again its function will be switched off again.

MT = Meantone

By pushing this piston you choose for the Meantone temperament. See under chapter "Choice of temperament". As soon as you switch on this temperament the Meantone temperament will be switched off automatically in case it was on.

By pushing the MT thumb piston again its function will be switched off again.

MB = Manual Bass

By pushing this piston the pedal will be coupled to the Great keyboard automatically. When you play a chord on the Great, the lowest key of this chord will be coupled from the Pedal to the Great. By pushing the MB thumb piston again its function will be switched off again.

CF = Cantus Firmus

By pushing this piston the Swell will be coupled to the Great keyboard. When you play a chord on the Great, the highest key of this chord will be coupled from the Swell to the Great. This way the effect of an automatic solo can be achieved. In case the Swell to Great coupler is already in use the CF function has no effect. By pushing the CF thumb piston again its function will be switched off again.

FA = Fix Accessories (Freeze Accessories)

When you use the couplers and tremulants in the fixed combinations (presets) or in the free combinations (capture system) or by using the thumb piston "0" (cancel) these will change too. You can avoid this by using the FA thumb piston. As long as this piston is switched on, you can only switch the couplers and tremulants on or off by hand. By pushing the FA thumb piston again its function will be switched off again.

SET

A thumb piston to program:

- Free combinations (see under “Using free combinations”).
- MIDI-tabs.

1 thru 8

Thumb pistons to store a personal registration into the capture memory by giving these registrations a number (1 thru 8) within a memory level (bank). These thumb pistons you need again to call these stored registrations from the capture memory. See under chapter “Using the free combinations”.

- and +

Thumb pistons with which you:

- Choose a Memory level (bank 1 thru 4). (See under “Using free combinations”).
- Choose an expander module patch/voice number and a channel number (see under “Programmable MIDI”).

PGM = Program General Crescendo

Piston that enables you:

- To change the stop combinations of the General Crescendo. See under “Using the General crescendo”.
- To program a MIDI-tab. See under “Programmable MIDI”.

PP thru T

The fixed combinations (presets) are registrations, preset according to musical standards, starting by PP (Pianissimo: very soft) thru T (Tutti: full organ).

The Tutti piston has two functions. When you play a stop combination chosen by yourself or from the presets (PP thru F) the T piston calls the full organ: the normal function of this piston. However, when you push the T once more you will recall the previous registration.

These presets have been fixed in the factory and cannot be changed by the user.

When you push one of the preset pistons the factory programmed stops will light up accordingly. It is always possible to switch stops on or off by hand.

0

The 0 piston (cancel/undo) can be found at the far right under the lowest keyboard. The 0 piston on the organ is duplicated. The 0-piston is also located to the right of the “T” piston.

The piston has two functions. It may happen that you switch on a preset or add a stop by hand by mistake. By pushing the “0” once quickly you will undo the latest change.

Example

You play the registration of Flute 8', Flute 4', and Flute 2'. After some time you add the Principal 8' and Principal 4'. There is always a very short time between switching on the Principal 8' and the Principal 4'. By pushing the 0 piston briefly only the Principal 4' will be switched off (undo the last change). Not the Principal 8' as well as the Principal 4' will be switched off (according to the organist this would be his last change). Actually the organ sees the Flute 8', Flute 4', Flute 2' and the Principal 8' as the previous registration and the organist the combination Flute 8', Flute 4', and Flute 2' as the last one.

When pushing the “0” piston longer all stops will be switched off at once. Exceptions are: the couplers and the tremulants when the FA piston is switched on and the stops Chorus, Intonation 2 and the MIDI.

RO = reeds off

Located to the far right of the presets is the RO (Reeds Off) thumb piston. By pushing this piston all reeds will be switched off at once. As long as the RO piston is switched on no reeds can be switched on. By pushing the RO thumb piston again its function will be switched off again.

S/S = All swells to swell

The S/S piston may be a custom-ordered piston for the Sweelinck 30 AGO. Pushing this piston will couple all expression pedals to the swell division expression pedal. This enables you to adjust the volume of the entire organ with only one expression pedal.

Controls

PITCH

With this control you can adjust the temperament of the organ in quarter steps.

This control has a central position indication, which means that, when turning, you can feel this control click in this central position. This central position is meant to tune the organ (with the TRANSPOSER control on position 0) on A=440 Hz

TRANSPOSER

With this control it is possible to transpose the organ. This means that the organ can be transposed 1, 2 or 3 set half steps lower or higher. When the position of the control is 0, the standard pitch for the organ is A=440 Hz, on the condition that the PITCH control is in central position.

When using the TRANSPOSER in combination with the PITCH control it is possible to adjust the organ 3 half steps higher or lower.

ACOUSTICS

The build-in digital acoustics provide a spacial reverberation of the organ sound. With this control the volume of the reverberation can be adjusted. To completely switch off the reverberations you turn the control to the left.

Memory lock

MEMORY LOCK

To save your registrations or to modify stored registrations, this switch must be switched on. See chapter "Using free combinations".

Toe Studs

The organ have the following Toe Pistons/Studs:

COUPLER pistons

With these toe studs you can control couplers. When a coupler is switched off, you can switch it on with the toe studs. Reverse is also possible.


TUTTI piston

This toe stud has the same function as the T thumb piston of the fixed combinations.

CAPTURE pistons (Except with Opus 5 AGO)

These toe studs have the same function as the memory pistons 1 thru 8.

External connections

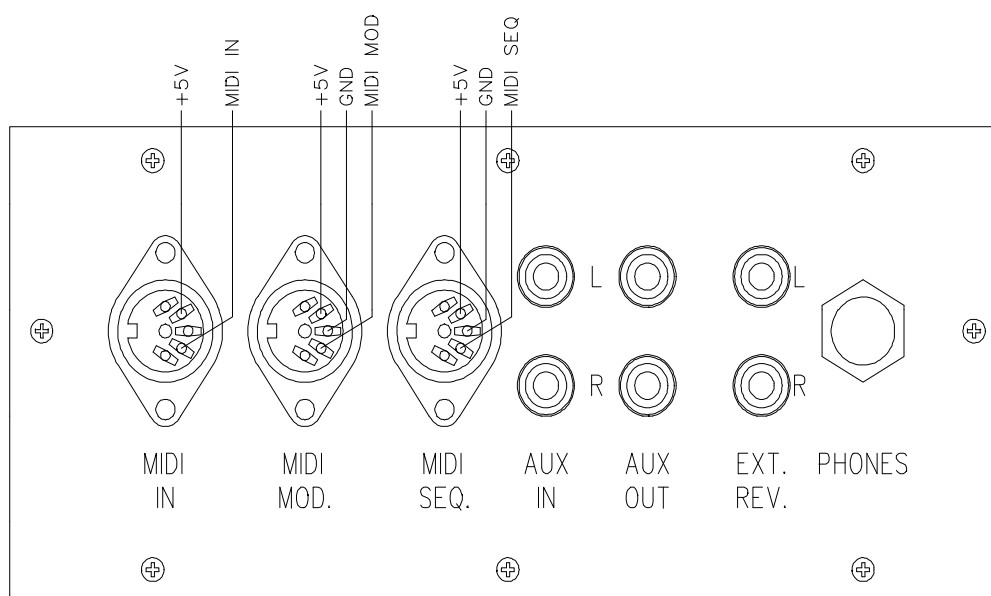

The following external connections are located left under the console:

MIDI IN

To receive MIDI-codes from the other instruments.

MIDI MOD.

Programmable MIDI-output. This MIDI-output is programmable for optimal use of e.g. an Sound expander module.

MIDI SEQ.

Non-programmable MIDI-output. This MIDI-output is sending a constant data-output with all (for e.g. a sequencer) required information (data dump).

When using our personal voicing software INTONAT you should use the MIDI SEQ output to send data to the computer. (In fact, a data dump too).

AUX IN

This input can be used to amplify the sound of an external device through the speakers of the organ. E.g., it is possible to play the sound of an expander module that is controlled by the organ's MIDI out through the organ's speakers.

The volume of the device that is connected to the AUX IN cannot be adjusted by the expression pedals or the VOLUME control (except external devices that are controlled by the organ's MIDI OUT).

AUX OUT

This output is meant to connect an external stereo amplifier.

EXT. REV.

The connection EXTERN REVERB is specifically for the JOHANNUS external surround acoustics device. This system, that works with 4 independent loudspeaker boxes in the room, creates a realistic acoustical impression of a concert hall, church or cathedral. It is not recommended to use this output for other purposes.

PHONES

This is the connection for a stereo headphone and suited for up to 2000 ohm.

Using a low impedance headphone (e.g. 8 ohm) may give a too loud a volume. This can be regulated with the VOLUME control.

When using a headphone the organ loudspeakers will be automatically switched off. All loudspeaker channels will be divided stereophonically through the two headphone channels.

Choice of temperament

The temperament is the way the different notes within an octave are tuned. This has been changed through the ages, depending on taste, different instruments and new instruments.

On this JOHANNUS organ you may choose from 3 different temperaments:

- Equal temperament
- Werckmeister III temperament
- Meantone temperament

Equal temperament

Today the most widely used and accepted temperament is the “equal temperament”. This is a tuning where all 12 quints have been undertuned and all tierces have been overtuned to keep the octave pure. Equal temperament is standard on the Johannus organ. In addition you have a choice out of a Romantic voicing and a Baroque voicing. On an instrument with Equal temperament you may play in any key.

Werckmeister III temperament

Andreas Werckmeister introduced his tuning approximately in 1691 in Germany. Within this temperament the often used tierces are more or less pure tuned. Every key has his own specific character. This effect has been used extensively in the baroque age and even after that. Johann Mattheson writes in 1713 that e.g. f-flat is used to express a resigned, deep and desperate agony. According to him C major is impertinent, but not unsuitable to also express feelings of joy. This temperament is recommended with “intonation 2”.

Meantone temperament

In Meantone the often used tierces are tuned pure. E.g. c-e, d-f#, etc. Because the tierces in chords with quints and tierces are determining the purity of a chord we experience these pure chords as very restful. Playing a chromatic scale it appears there are clear differences between the half steps. It is impossible to play pure sounding chords on the a#, f#, g# and b in a Meantone temperament.

This Meantone temperament was in use until appr. 1650. Music from this period of time is based on this temperament. Because all the half steps the chromatical parts of the music sounds violent. This possibility has often been used to create special feelings among the listeners. The more false the chords, the deeper the emotion.

From the period of time of appr. 1550-1650 there are many examples where also the less pure chords have been used for expressive purposes. Composers that lived and worked then were e.g. Michael Praetorius (1571-1621) and Jan Pieterszoon Sweelinck (1562-1621).

In fact this music needs a Meantone temperament to give it an extra dimension. In our modern equal temperament this music sounds accentless and the true dimension gets lost. This Meantime temperament sounds best with the “intonation 2” switched on.

Using free combinations (capture system)

What are free combinations?

Free combinations are a special kind of presets. The combination of stops in presets are fixed. With free combinations you are able to store your choice of stop combinations into the memory and recall them when needed. This, of course, is especially helpful when many different registrations occur in a piece of music. It makes the help of assistants redundant.

The memory of free combinations is protected so that it cannot be erased when you switch off the organ or when you unplug the organ from the main power.

The capture system consists of the following:

- Key switch MEMORY LOCK
- Thumb pistons - and + (except with Opus 5 AGO)
- Display
- Thumb piston SET
- Thumb pistons 1 thru 8 (Opus 5 AGO: thumb pistons 1 thru 7)

With the capture system you can program 32 personal registrations per division (divisionals) as well as for the entire organ (generals). These registrations can be recalled at any time. The generals as well as the divisionals have four memory banks to be chosen with the pistons - and +. Every memory bank can store 8 combinations, accessible by the pistons 1 thru 8. On every setter location you may store a personal registration. Only the accessories Chorus and Intonation 2 cannot be stored in the capture system.

The divisionals are not standard, but may be custom-ordered for the OPUS 5/10/20 AGO.

On the Opus 5 AGO you can store 7 personal registrations.

How to set free combinations

A free combination is programmed as follows:

1. First check if the PGM pistons is not switched on. This to avoid modifying a programmed MIDI stop.
2. Make the memory accessible by turning the MEMORY LOCK a quarter turn to the right. The SET piston will light up to indicate the memory can be accessed.
3. Choose the registration you want to store in the capture system.
4. Choose a memory bank (e.g. memory bank M2) by pushing one or more times on the - or + piston until the display shows the correct memory bank (in this example 2).
5. Push on SET (keep on pushing) and choose the memory number (e.g. piston number 3 of the Great division). On the display you will see the letter *P* to indicate that the registration is programmed in the capture.
6. First release the piston for the memory number (in this example number 3) and then the SET piston.

7. Close the memory by turning the key switch MEMORY LOCK a quarter turn to the left and remove, if necessary, the key from the switch. The light in the SET piston will go off to indicate that the memory is not accessible anymore.
8. Write the programmed combination (e.g. M2-3GR) in your music paper where you want to use it.

The personal registration has now been stored in memory bank 2 in number 3 of the great division.

On the Opus 5 AGO a free combination is programmed as follows:

1. Choose the registration you want to store in the capture system.
2. Push on SET (keep on pushing) and choose the memory number (e.g. piston number 3).
3. First release the piston for the memory number (in this example number 3) and then the SET piston.

The personal registration has now been stored in memory number 3.

Recalling the free combinations

To recall the personal registrations it is not necessary to make the capture system accessible with the key switch MEMORY LOCK. Recalling goes as follows:

1. Determine the setter combination you want to recall (e.g. M2-3SW).
2. Choose the memory bank with the - and + pistons (e.g. M2). The memory bank shows up in the display.
3. Then choose the memory number (e.g. push piston 3 of the swell division).

In the registration you recalled you may add or remove stops by hand,

On the Opus 5 AGO the recalling of a personal registration goes as follows:

1. Determine the setter combination you want to recall (e.g. 3).
2. Choose the memory number (e.g. 3).

Using the General Crescendo

With the general crescendo you can add stops from very soft (pianissimo) till full organ (Tutti). The 10 steps are preset according to musical standards.

The general crescendo always has priority above the manual registration, fixed combination or free combination. Also the stops switched on by the general crescendo cannot be canceled by the 0 piston. Within a stops combination of the general crescendo it is possible to add extra stops. Reeds which have been switched on by the general crescendo can be switched off by the RO (Reeds Off) switch.

The standard stop combination of each step within the general crescendo cannot be changed by the user.

MIDI applications

What is MIDI?

MIDI is the abbreviation of Musical Instruments Digital Interface. With MIDI different musical instruments can be connected with each other or a computer. For example, it is possible to play on your organ and at the same time on a synthesizer or an expander module. The MIDI standard is partly based on hardware. Next to that it is a worldwide agreement about the way music and sound are being interpreted and communicated between devices that have MIDI capability. The MIDI codes sent by a Johannus organ tell e.g. which key is played.

MIDI consists of the following parts:

- MIDI-connections (MIDI IN, MIDI MOD., MIDI SEQ.).
- MIDI-stops
- A device (e.g. synthesizer) that you want to connect through MIDI
- Connection cables

The MIDI-stops are the last in the group of stops of the Pedal, Great, Swell and Choir (only for Opus 30).

The MIDI stops have a number. The MIDI number for Great on the OPUS 5, 10 and 20 is number 1 (for Opus 30 the MIDI Great is number 2). This number indicates the MIDI channel used to transfer key information through MIDI SEQ. when playing the Great. MIDI has at least 16 channel to transfer data. The MIDI stops determine from which keyboard(s) you send key information to other device(s).

How and what to connect?

Imagine you want to connect 3 expanders to your organ. One you want to play from the Great, the other from the Swell and the third from the Pedal.

The following has to be done:

1. Connect the expanders with the MIDI cables (DIN).
2. Switch on MIDI stop Great 1. The expander must be configured so that it can only receive data through the channel programmed to MIDI stop Great 1 (see under "Programmable MIDI").
3. Switch on MIDI Swell 2. Set the second expander for the channel programmed to MIDI stop Swell 2.
4. Switch on MIDI stop Pedal 3. Set the third expander for the channel programmed to MIDI stop Pedal 3.

Programmable MIDI

Programmable MIDI allows you to access an expander module voice/patch (1-128) through one of the channels (1-16) by switching on a MIDI stop. (MIDI Great 1; MIDI Swell 2; MIDI Pedal 3 etc.).

E.g. when the MIDI stop MIDI Great 1 is programmed to expander module voice/patch number 7, channel 15, and MIDI stop Great 1 is switched on, the key data will be transferred through channel 15 and expander module voice/patch 7 can be heard when playing.

The memory is protected so that it can not be erased when you switch off the organ or when you unplug the organ from the main power.

Program MIDI manually

Items to programming the MIDI stops are:

- Key switch MEMORY LOCK
- Thumb pistons – and +
- Display
- Piston SET
- Piston PGM
- MIDI-stops

A MIDI stop can be programmed as follows:

1. First push one of the 0 pistons or one of the preset pistons. This to be sure that you don't change a MIDI stop that was already programmed in the capture.
2. Make the memory accessible by turning the MEMORY LOCK a quarter turn to the right (not applicable on Opus 5 AGO). The SET piston will light up to indicate the memory can be accessed.
3. Switch on the MIDI stop you want to program (e.g. Swell 2).
4. Push the PGM piston. The display will show the actual (last programmed) channel number (in this example the channel number of the accesory MIDI SWELL 2).
5. Choose, by pushing one or more times on the - or the + piston, the channel you want to assign to the MIDI stop. The channel (1 thru 16) will show up in the display.
6. Push SET when you selected the right channel (e.g. channel 6). The selected channel has been assigned now to the MIDI stop.

The display will reflect the actual patch number directly after depressing (and releasing) the SET piston.

7. Now you can choose the module voice you want to assign to the MIDI stop, by pressing once or more times the minus or plus piston. The module voice (e.g. 40) will show up in the display.

The selected patch number (1-128) will be reflected as follows:

1-99 will appear normally as *1 - 99*.

100 to 128 will appear as *0.0 - 2.8*.

The dot between the two digits indicates the third digit (the hundreds).

8. Push SET when you selected the right module voice (e.g. patch 40). To indicate that the selected channel and module voice are being programmed a *P* will show up in the display as long as you push SET.
9. The MIDI stop MIDI Swell 2 now has been programmed with channel 7, module voice 40. This means that switching on MIDI Swell 2 while playing the swell, key data will be transferred over channel 6 to the module and that module voice 40 will be switched on.
10. Close the memory by turning the key switch MEMORY LOCK a quarter turn to the left and eventually remove the key from the switch (not applicable on Opus 5 AGO). The light in the SET piston will go off to indicate that the memory is not accessible anymore.
11. Switch off the PGM by pushing it again.

Program MIDI into capture system

In fact this means storing a module voice into the capture system of the organ, possibly in combination with some other normal organ voices.

A MIDI-stop can be programmed in the memory as follows:

1. Make the memory accessible by turning the MEMORY LOCK a quarter turn to the right (not applicable on O. The SET piston will light up to indicate the memory can be accessed.
2. Switch on the MIDI-stop that has to be programmed (E.g. MIDI Swell 2) together (when desired) with other stops that you want to store into the capture system.
3. First store this registration in the chosen free combination (see under "Using free combinations). This can be a free combination from the generals as from the divisionals.
Note: 1. If you don't store the chosen module registration in the capture memory first, the programmed manual registration of this MIDI stop will be changed unintentionally.
2. Concerning the divisionals (separates) you can only program MIDI-stops into the accompanying divisions. For example, you can only program MIDI Swell 2 into the Swell divisionals and not into e.g. Great divisionals.
4. Push the PGM piston. The display will show the actual (last programmed) channel number (in this example the channel number of the accessory MIDI SWELL 2).
5. Choose, by pushing one or more times on the - or the + piston, the channel you want to assign to the MIDI stop. The channel (1 thru 16) will show up in the display.

6. Push SET when you selected the right channel (e.g. channel 7). The selected channel has been assigned now to the MIDI stop.

The display will reflect the actual patch number directly after depressing (and releasing) the SET piston.

7. Now you can choose the module voice you want to assign to the MIDI stop, by pressing once or more times the minus or plus piston. The module voice (e.g. 41) will show up in the display.
8. Push SET when you selected the right module voice (e.g. patch 41). To indicate that the selected channel and module voice are being programmed a *P* will show up in the display as long as you push SET.
9. The MIDI stop MIDI Swell 2 now has been programmed with channel 7, module voice 41. This means that recalling the concerning free combination the key data from the Swell is transmitted through channel 7 to the external module while module voice (patch) 41 is switched on.
10. Close the memory by turning the key switch MEMORY LOCK a quarter turn to the left and eventually remove the key from the switch (not applicable on Opus 5 AGO). The light in the SET piston will go off to indicate that the memory is not accessible anymore.
11. Switch off the PGM by pushing it again.

Using the capture system you can assign one MIDI-stop to several channels/module voice (patches). E.g. an Opus 30 with expanded capture system may have 65 different settings **per** MIDI stop. (1x manual setting, 32 general settings and 32 separate settings). The entire organ can handle $4 \times 65 = 260$ different settings.

When programming more than one MIDI stop (with or without a combination with normal organ voices) in one free combination you should start with the lowest numbered MIDI stop.

Program e.g. MIDI-Great 1, MIDI Swell 2 and MIDI Pedal 3 in one free combination as follows:


1. Switch on the three MIDI switches (upon wish including other organ stops).
2. First store this registration into the free combination of your choice. (see under 'Using free combinations').
3. Push the PGM piston.
4. Choose the channel for MIDI Great 1 (the MIDI with the lowest number) by using the - and + pistons.
5. Push the SET piston.
6. Choose the module voice (patch) for MIDI Great 1 by using the - and + pistons.
7. Push the SET piston. The setting for MIDI Great 1 is programmed now.
8. Switch off the MIDI Great 1 stop.
9. Choose the channel for MIDI Swell 2 (now the MIDI with the lowest number) by using the - and + pistons.

10. Push the SET piston.
11. Choose the module voice (patch) for MIDI Swell 2 by using the - and + pistons.
12. Push the SET piston. The setting for MIDI Swell 2 is programmed now.
13. Switch off the MIDI Swell 2 stop.
14. Choose the channel for MIDI Pedal 3 (now the MIDI with the lowest number) by using the - and + pistons.
15. Push the SET piston.
16. Choose the module voice (patch) for MIDI Pedal 3 by using the - and + pistons.
17. Push the SET piston. The setting for MIDI Pedal 3 is programmed now.
18. Switch off PGM.

External Loudspeaker system

The organ can be extended with an external loudspeaker system, for example a pipe facade with several speaker boxes behind it. At the back side (or kept internally) is an connector (octal socket). With a special cable you connect the loudspeaker system to the instrument. In that case there will be a 3-position switch on the instrument too.

The 8 pins of the octal socket are connected as follows:

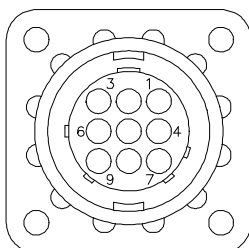

Number	Channel	Organ model
1 2	Ground (-) ch. 1 Signal (+) ch. 1	Opus 5,10,20,30
3 4	Ground (-) ch. 2 Signal (+) ch. 2	Opus 5,10,20,30
5 6	Ground (-) ch. 3 Signal (+) ch. 3	Opus 5,10,20,30
7 8	Ground (-) ch. 4 Signal (+) ch. 4	Opus 10,20,30

3-position switch

This switch enables you to choose between loudspeakers in the organ and the external loudspeakers.

The switch has the following positions:

Position A

The organ sound comes from the loudspeakers in the organ console and not from the external loudspeakers.

Position AB

The organ sound comes from the loudspeakers in the organ console as well as from the external loudspeakers. However, the sound from the loudspeakers in the organ console is softer than the A-position.

Position B

The organ sound comes from the external speakers and not from the console speakers.

Maintenance

The console consists of wooden veneer and solid wooden parts.

To clean the cabinet use a normal duster or a light wet cloth or chamois and polish with a dry cloth.

We do not recommend furniture- or teak oil, because it may be harmful for the lacquer. Direct sunlight may change the color of the cabinet, especially light oak consoles.

The keys can be treated the same as the woodwork. Little scratches that may originate from playing can be removed with car polish. **NEVER** try to remove spots with aggressive liquors like thinner, acetone, etc. These will irrevocably damage the instrument.

Guarantee

With the purchase of your JOHANNUS Organ you received a limited warrantee card. Please read the conditions carefully and send the bottom part to JOHANNUS Orgelbouw b.v. in Ede as soon as possible. Again we want to emphasize that modifications on the organ or incompetent handling will end the warrantee.

Appendices

Technical specifications

	Opus 5 AGO	Opus 10 AGO	Opus 20 AGO	Opus 30 AGO
Voices:				
Romantic	19	26	34	38
Baroque	19	26	34	38
Special voices (4)	option	option	option	option
Keyboards (church organ touch):				
5 octaves (C-c''''') synthetic	2	2	2	3
5 octaves (C-c''''') wood	option	option	option	option
Amplifiers/channels (50 Watt max. 8Û each)	3	4	4	4
Acoustics (adjustable volume)	•	•	•	•
Transposer (6 steps +/- 3 half steps)	•	•	•	•
Pitch (+/- ¼ tone adjustable)	•	•	•	•
Fixed combinations (Presets) PP-P-MF-F-FF-T	•	•	•	•
Capture system				
Generals	7	32	32	32
Divisionals (+ 96)	-	option	option	-
Divisionals (+128)	-	-	-	option
MIDI-tabs (programmable)	•	•	•	•
General volume (MIDI controlled)	•	•	•	•
Expression pedals (MIDI controlled)	2	2	2	2
General crescendo (10 steps)	•	•	•	•
3-position switch for external loudspeakers	option	option	option	option
Toe studs	4	12	12	15
Pedal:				
32 note AGO (C-g')	•	•	•	•
Accessories:				
Couplers	3	3	3	6
Tremulants	2	2	2	3
Tremolo	option	option	option	option
Chorus	•	•	•	•
MB = Manual Bass	•	•	•	•
CF = Cantus Firmus	-	•	•	•
FA = Fix Accessoires	-	•	•	•
RO = Reeds off	-	•	•	•
0 = Cancel	•	•	•	•
S/S = All swells to swell	option	option	option	option
Temperament:				
Equal	•	•	•	•
Werckmeister III	-	•	•	•
Meantone	-	•	•	•
External connections:				
MIDI In-Mod-Seq	•	•	•	•
Headphone Stereo up to 2kÛ	•	•	•	•
External Reverb 470Û/300mV	•	•	•	•
Aux In1kÛ/70mV (stereo)	•	•	•	•
Aux Out 470Û/300mV (stereo)	•	•	•	•
Loudspeaker Outputs 8Û	option	option	option	option

Technical specifications cabinet

	Opus 5 AGO	Opus 10 AGO	Opus 20 AGO	Opus 30 AGO
Furniture:				
Dark oak or light oak	•	•	•	•
Other colors or kinds of wood	option	option	option	option
Wooden roll cover	•	•	•	•
Wooden expression pedals	option	option	option	option
Pedal lights	•	•	•	•
Bench with storage space	•	•	•	•
Bench with lid	option	option	option	option
Bench with adjustable height	option	option	option	option
Dimensions:				
Height (without music rack)	117 cm	117 cm	117 cm	124 cm
Height (with music rack)	139 cm	139 cm	139 cm	146 cm
Width	139 cm	139 cm	139 cm	139 cm
Depth (without pedalboard)	63 cm	63 cm	63 cm	76 cm
Depth (with 32 note AGO pedal)	100 cm	100 cm	100 cm	100 cm

MIDI Implementation charts

JOHANNUS Organ
OPUS 5 AGO

MIDI Implementation Chart

Date: Feb. 1999
Version 3.00

Functions		Transmitted	Recognized	Remarks
Basic Channel	Default	1, 2, 3, 12 1 - 16 ¹	1, 2, 3, 12 N	1 = Great 2 = Swell 3 = Pedal 12 = Stops
	Changes			
Mode	Default	Mode 3 N * * * * *	Mode 3 N N	
	Messages Altered			
Note Number	True voice	36 - 96 * * * * *	36 - 96 36 - 96	
Velocity	Note ON Note OFF	9nH (v=64) 9nH (v=0)	9nH v=1 - 127 9nH v=0, 8nH v=*	*=irrelevant
After Touch	Keys Channels	N N	N N	
Pitch Bend		N	N	
Control Change	7	Y	Y	General volume Expression pedals Pitch Transposer
	11	Y	Y	
	100/101/6	Y	N	
	100/101/6	Y	N	
Program Change	:True#	0 - 127 ¹ * * * * *	0 - 36 ² 0 - 36 ²	0 - 4 Stops Pedal 6 - 14 Stops Swell 16 - 23 Stops Great 24 - 30 Accessories ³ 32 - 36 Spec. Voices
System Exclusive		Y	Y	All stops off
Common	:Song Pos	N	N	
	:Song Sel	N	N	
	:Tune	N	N	
System Real Time	:Clock :Commands	N N	N N	
Aux	:Reset All Controller	N	N	
	:Local On/OFF	N	N	
	:All Notes OFF	N	Y	
	:Active Sense	N	N	
	:Reset	N	N	
Notes		¹ By meant of the programmable MIDI-stops ² Except 5, 15 and 31 ³ Couplers, Tremulants, Chorus and Intonation 2		

Mode 1: OMNY ON, POLY
Mode 3: OMNY OFF, POLY

Mode 2: OMNY ON, MONO
Mode 4: OMNY OFF, MONO

Y = YES
N = NO

MIDI Implementation Chart

Functions		Transmitted	Recognized	Remarks
Basic Channel	Default Changes	1, 2, 3, 12 1 - 16 ¹	1, 2, 3, 12 N	1 = Great 2 = Swell 3 = Pedal 12 = Stops
Mode	Default Messages Altered	Mode 3 N * * * * *	Mode 3 N N	
Note Number	True voice	36 - 96 * * * * *	36 - 96 36 - 96	
Velocity	Note ON Note OFF	9nH (v=64) 9nH (v=0)	9nH v=1 - 127 9nH v=0, 8nH v=*	*=irrelevant
After Touch	Keys Channels	N N	N N	
Pitch Bend		N	N	
Control Change	7 11 100/101/6 100/101/6	Y Y Y Y	Y Y N N	General volume Expression pedals Pitch Transposer
Program Change	:True#	0 - 127 ¹ * * * * *	0 - 38 ² 0 - 38 ²	0 - 8 Stops Pedal 10 - 19 Stops Swell 21 - 30 Stops Swell 32 - 38 Accessories ³ 40 - 44 Spec. Voices
System Exclusive		Y	Y	All stops off
Common	:Song Pos :Song Sel :Tune	N N N	N N N	
System Real Time	:Clock :Commands	N N	N N	
Aux	:Reset All Controller :Local On/OFF :All Notes OFF :Active Sense :Reset	N N N N N	N N Y N N	
Notes		¹ By meant of the programmable MIDI-stops ² Except 9, 20, 31 and 39 ³ Couplers, Tremulants, Chorus and Intonation 2		

Mode 1: OMNY ON, POLY
Mode 3: OMNY OFF, POLY

Mode 2: OMNY ON, MONO
Mode 4: OMNY OFF, MONO

Y = YES
N = NO

MIDI Implementation Chart

Functions		Transmitted	Recognized	Remarks
Basic Channel	Default Changes	1, 2, 3, 12 1 - 16 ¹	1, 2, 3, 12 N	1 = Great 2 = Swell 3 = Pedal 12 = Stops
Mode	Default Messages Altered	Mode 3 N * * * * *	Mode 3 N N	
Note Number	True voice	36 - 96 * * * * *	36 - 96 36 - 96	
Velocity	Note ON Note OFF	9nH (v=64) 9nH (v=0)	9nH v=1 - 127 9nH v=0, 8nH v=*	*=irrelevant
After Touch	Keys Channels	N N	N N	
Pitch Bend		N	N	
Control Change	7 11 100/101/6 100/101/6	Y Y Y Y	Y Y N N	General volume Expression pedals Pitch Transposer
Program Change	:True#	0 - 127 ² * * * * *	0 - 46 ² 0 - 46 ²	0 - 8 Stops Pedal 10 - 23 Stops Swell 25 - 38 Stops Great 40 - 46 Accessories ³ 48 - 52 Spec. Voices
System Exclusive		Y	Y	All stops off
Common	:Song Pos :Song Sel :Tune	N N N	N N N	
System Real Time	:Clock :Commands	N N	N N	
Aux	:Reset All Controller :Local On/OFF :All Notes OFF :Active Sense :Reset	N N N N N	N N Y N N	
Notes		¹ By meant of the programmable MIDI-stops ² Except 9, 24, 39 and 47 ³ Couplers, Tremulants, Chorus and Intonation 2		

Mode 1: OMNY ON, POLY
Mode 3: OMNY OFF, POLY

Mode 2: OMNY ON, MONO
Mode 4: OMNY OFF, MONO

Y =YES
N = NO

MIDI Implementation Chart

Functions		Transmitted	Recognized	Remarks
Basic Channel	Default Changes	1, 2, 3, 4, 12 1 - 16 ¹	1, 2, 3, 4, 12 N	1 = Choir 2 = Great 3 = Swell 4 = Pedal 12 = Stops
Mode	Default Messages Altered	Mode 3 N * * * * *	Mode 3 N N	
Note Number	True voice	36 - 96 * * * * *	36 - 96 36 - 96	
Velocity	Note ON Note OFF	9nH (v=64) 9nH (v=0)	9nH v=1 - 127 9nH v=0, 8nH v=*	*=irrelevant
After Touch	Keys Channels	N N	N N	
Pitch Bend		N	N	
Control Change	7 11 100/101/6 100/101/6	Y Y Y Y	Y Y N N	General volume Expression pedals Pitch Transposer
Program Change	:True#	0 - 127 ¹ * * * * *	0 - 60 ² 0 - 60 ²	0 - 8 Stops Pedal 10 - 21 Stops Swell 23 - 34 Stops Great 36 - 44 Stops Choir 48 - 53 Accessories ³ 56 - 60 Accessories ⁴ 64 - 68 Spec. Voices
System Exclusive		Y	Y	All stops off
Common	:Song Pos :Song Sel :Tune	N N N	N N N	
System Real Time	:Clock :Commands	N N	N N	
Aux	:Reset All Controller :Local On/OFF :All Notes OFF :Active Sense :Reset	N N N N N	N N Y N N	
Notes		¹ By meant of the programmable MIDI-stops ² Except 9, 22, 35, 45-47, 54-55 and 61-63 ³ Couplers ⁴ Tremulants, Chorus and Intonation 2		

Mode 1: OMNY ON, POLY
Mode 3: OMNY OFF, POLY

Mode 2: OMNY ON, MONO
Mode 4: OMNY OFF, MONO

Y = YES
N = NO

Registration examples

Registration examples Opus 5 AGO

		<i>ppp</i>	<i>pp</i>	<i>p</i>	<i>mf</i>	<i>f</i>	<i>ff</i>	<i>t</i>	Solo on Great	Solo on Swell	Trio 1	Trio 2	Romantic	Plenum
PEDAL														
Subbass	16'	●	●	●	●	●	●	●	●	●	●	○	●	●
Octave	8'	○	○	○	●	●	●	●	○	○	○	○	○	●
Gedackt	8'	○	○	●	●	●	●	●	●	○	●	●	○	○
Fagotto	16'	○	○	○	○	○	○	●	○	○	○	○	○	○
SWELL														
Stopped Flute	8'	○	●	●	●	●	●	●	●	○	●	○	●	●
Viola di Gamba	8'	●	●	●	●	●	●	●	○	○	○	●	●	○
Vox Celeste	8'	○	○	○	○	○	○	○	○	○	○	○	●	○
Koppelflute	4'	○	○	●	●	●	●	●	●	○	●	○	○	●
Flute Twelfth	2 ² / ₃ '	○	○	○	○	●	●	●	○	○	●	○	○	●
Waldflute	2'	○	○	○	○	●	●	●	○	○	○	○	○	●
Nazard	1 ¹ / ₃ '	○	○	○	○	○	○	●	○	○	●	○	○	●
Oboe	8'	○	○	○	○	●	●	●	○	●	○	○	○	○
GREAT														
Principal	8'	○	○	○	●	●	●	●	●	○	○	○	○	●
Rohrflute	8'	●	●	●	●	●	●	●	○	●	●	●	●	○
Octave	4'	○	○	○	●	●	●	●	○	○	○	○	○	●
Octave	2'	○	○	○	○	○	●	●	○	○	●	○	○	●
Sesquialter	II	○	○	○	○	○	○	○	●	○	○	○	○	○
Mixture	II-IV	○	○	○	○	○	○	●	○	○	○	○	○	●
Trumpet	8'	○	○	○	○	○	○	●	○	○	○	○	○	○
ACCESSORIES														
Swell-Great		○	●	●	●	●	●	●	●	○	○	○	●	●
Great-Pedal		○	○	●	●	●	●	●	○	●	○	○	●	●
Swell-Pedal		●	●	●	●	●	●	●	●	○	○	○	●	●
Tremulant Great		○	○	○	○	○	○	○	○	○	○	○	●	○
Tremulant Swell		○	○	○	○	○	○	○	○	●	○	○	●	○
Chorus		○	○	○	○	○	○	○	○	○	○	○	●	○

Personal registrations Opus 5 AGO

PEDAL

Subbass	16'	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Octave	8'	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Gedackt	8'	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Fagotto	16'	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

SWELL

Stopped Flute	8'	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Viola di Gamba	8'	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Vox Celeste	8'	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Koppelflute	4'	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Flute Twelfth	2 ² / ₃ '	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Waldflute	2'	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Nazard	1 ¹ / ₃ '	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Oboe	8'	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

GREAT

Principal	8'	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Rohrflute	8'	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Octave	4'	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Octave	2'	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Sesquialter	II	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Mixture	II-IV	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Trumpet	8'	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

ACCESSORIES

Swell-Great	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Great-Pedal	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Swell-Pedal	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Tremulant Great	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Tremulant Swell	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Chorus	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

Registration examples Opus 10 AGO

		<i>ppp</i>	<i>pp</i>	<i>p</i>	<i>mf</i>	<i>f</i>	<i>ff</i>	<i>t</i>	Solo on Great	Solo on Swell	Trio 1	Trio 2	Romantic	Plenum
PEDAL														
Principal	16'	○	○	○	○	●	●	●	○	○	○	○	○	●
Subbass	16'	●	●	●	●	●	●	●	●	●	●	○	●	●
Octave	8'	○	○	○	●	●	●	●	○	○	●	○	○	●
Gedackt	8'	○	○	●	●	●	●	●	●	○	○	●	○	○
Choralbass	4'	○	○	○	○	○	●	●	○	○	○	○	○	●
Nachthorn	2'	○	○	○	○	○	●	●	○	○	○	○	○	●
Contra Trumpet	16'	○	○	○	○	○	○	●	○	○	○	○	○	○
Trumpet	8'	○	○	○	○	○	●	●	○	○	○	○	○	○
SWELL														
Stopped Flute	8'	○	●	●	●	●	●	●	●	○	●	○	○	●
Viola di Gamba	8'	●	●	●	●	●	●	●	●	○	○	●	●	○
Vox Celeste	8'	○	○	○	○	○	○	○	○	○	○	○	●	○
Koppelflute	4'	○	○	●	●	●	●	●	●	○	●	○	○	●
Flute Twelfth	2 ² / ₃ '	○	○	○	○	●	●	●	○	○	●	○	○	●
Waldflute	2'	○	○	○	○	●	●	●	○	○	○	○	○	●
Tierce	1 ³ / ₅ '	○	○	○	○	○	○	○	○	○	●	○	○	○
Scharff	III	○	○	○	○	○	●	●	○	○	○	○	○	●
Oboe	8'	○	○	○	○	●	●	●	○	●	○	○	○	○
GREAT														
Principal	8'	○	○	○	●	●	●	●	○	○	○	○	○	●
Rohrflute	8'	●	●	●	●	●	●	●	●	●	●	●	●	○
Octave	4'	○	○	○	●	●	●	●	○	○	○	○	○	●
Open Flute	4'	○	○	●	●	●	●	●	●	○	○	○	○	○
Twelfth	2 ² / ₃ '	○	○	○	○	●	●	●	○	○	○	○	○	●
Octave	2'	○	○	○	○	○	●	●	○	○	●	○	○	●
Cornet	IV	○	○	○	○	○	○	○	●	○	○	○	○	○
Mixture	V	○	○	○	○	○	○	●	○	○	○	○	○	●
Trumpet	8'	○	○	○	○	○	○	●	○	○	○	○	○	○
ACCESSORIES														
Swell-Great		○	●	●	●	●	●	●	●	○	○	○	●	●
Great-Pedal		○	○	●	●	●	●	●	○	●	○	○	●	●
Swell-Pedal		●	●	●	●	●	●	●	●	○	○	○	●	●
Tremulant Great		○	○	○	○	○	○	○	○	○	○	○	●	○
Tremulant Swell		○	○	○	○	○	○	○	○	●	○	○	●	○
Chorus		○	○	○	○	○	○	○	○	○	○	○	●	○

Personal registrations Opus 10 AGO

PEDAL

Principal	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Subbass	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Gedackt	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Choralbass	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Nachthorn	2'	○	○	○	○	○	○	○	○	○	○	○	○	○
Contra Trumpet	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Trumpet	8'	○	○	○	○	○	○	○	○	○	○	○	○	○

SWELL

Stopped Flute	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Viola di Gamba	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Vox Celeste	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Koppelflute	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Flute Twelfth	2 ² / ₃ '	○	○	○	○	○	○	○	○	○	○	○	○	○
Waldflute	2'	○	○	○	○	○	○	○	○	○	○	○	○	○
Tierce	1 ³ / ₅ '	○	○	○	○	○	○	○	○	○	○	○	○	○
Scharff	III	○	○	○	○	○	○	○	○	○	○	○	○	○
Oboe	8'	○	○	○	○	○	○	○	○	○	○	○	○	○

GREAT

Principal	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Rohrflute	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Open Flute	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Twelfth	2 ² / ₃ '	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	2'	○	○	○	○	○	○	○	○	○	○	○	○	○
Cornet	IV	○	○	○	○	○	○	○	○	○	○	○	○	○
Mixture	V	○	○	○	○	○	○	○	○	○	○	○	○	○
Trumpet	8'	○	○	○	○	○	○	○	○	○	○	○	○	○

ACCESSORIES

Swell-Great	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Great-Pedal	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Swell-Pedal	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Tremulant Great	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Tremulant Swell	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Chorus	○	○	○	○	○	○	○	○	○	○	○	○	○	○

Registration examples Opus 20 AGO

		<i>ppp</i>	<i>pp</i>	<i>p</i>	<i>mf</i>	<i>f</i>	<i>ff</i>	<i>t</i>	Solo on Great	Solo on Swell	Trio 1	Trio 2	Romantic	Plenum
PEDAL														
Principal	16'	○	○	○	○	●	●	●	○	○	○	○	○	●
Subbass	16'	●	●	●	●	●	●	●	●	●	●	○	●	●
Octave	8'	○	○	○	●	●	●	●	○	○	●	○	○	●
Gedackt	8'	○	○	●	●	●	●	●	○	○	○	●	○	○
Choralbass	4'	○	○	○	○	○	●	●	○	○	○	○	○	●
Nachthorn	2'	○	○	○	○	○	●	●	○	○	○	○	○	●
Contra Trumpet	16'	○	○	○	○	○	○	●	○	○	○	○	○	○
Trumpet	8'	○	○	○	○	○	●	●	○	○	○	○	○	○
SWELL														
Principal	8'	○	○	○	●	●	●	●	○	○	○	○	○	●
Rohrflute	8'	○	●	●	●	●	●	●	●	●	●	○	●	○
Viola di Gamba	8'	●	●	●	●	●	●	●	●	○	○	●	●	○
Vox Celeste	8'	○	○	○	○	○	○	○	○	○	○	○	●	○
Octave	4'	○	○	○	●	●	●	●	○	○	○	○	○	●
Koppelflute	4'	○	○	●	●	●	●	●	○	○	●	○	○	○
Flute Twelfth	2 ² / ₃ '	○	○	○	○	●	●	●	○	○	●	○	○	●
Waldflute	2'	○	○	○	○	●	●	●	○	○	○	○	○	●
Tierce	1 ³ / ₅ '	○	○	○	○	○	○	○	○	○	●	○	○	○
Nazard	1 ¹ / ₃ '	○	○	○	○	○	●	●	○	○	○	○	○	●
Scharff	III	○	○	○	○	○	○	●	○	○	○	○	○	●
Cromorne	8'	○	○	○	○	●	●	●	○	○	○	○	○	○
Oboe	8'	○	○	○	○	○	●	●	○	●	○	○	○	○
GREAT														
Bourdon	16'	○	○	○	○	○	○	●	○	○	○	○	○	○
Principal	8'	○	○	○	●	●	●	●	○	○	○	○	○	●
Stopped Flute	8'	○	●	●	●	●	●	●	●	●	●	●	●	○
Gamba	8'	●	●	●	●	●	●	●	○	○	○	○	○	○
Octave	4'	○	○	○	●	●	●	●	○	○	○	○	○	●
Open Flute	4'	○	○	●	●	●	●	●	○	○	○	○	○	○
Twelfth	2 ² / ₃ '	○	○	○	○	●	●	●	○	○	○	○	○	●
Octave	2'	○	○	○	○	○	●	●	○	○	●	○	○	●
Cornet	IV	○	○	○	○	○	○	○	○	○	○	○	○	●
Mixture	VII	○	○	○	○	○	○	●	○	○	○	○	○	○
Trumpet	16'	○	○	○	○	○	○	●	○	○	○	○	○	○
Trumpet	8'	○	○	○	○	○	○	●	○	○	○	○	○	○
Vox Humana	8'	○	○	○	○	●	●	●	●	○	○	○	○	○
ACCESSORIES														
Swell-Great		○	●	●	●	●	●	●	●	○	○	○	●	●
Great-Pedal		○	○	●	●	●	●	●	○	●	○	○	●	●
Swell-Pedal		●	●	●	●	●	●	●	●	○	○	○	●	●
Tremulant Great		○	○	○	○	○	○	○	●	○	○	○	●	○
Tremulant Swell		○	○	○	○	○	○	○	○	●	○	○	●	○
Chorus		○	○	○	○	○	○	○	○	○	○	○	●	○

Personal registrations Opus 20 AGO

PEDAL

Principal	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Subbass	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Gedackt	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Choralbass	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Nachthorn	2'	○	○	○	○	○	○	○	○	○	○	○	○	○
Contra Trumpet	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Trumpet	8'	○	○	○	○	○	○	○	○	○	○	○	○	○

SWELL

Principal	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Rohrflute	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Viola di Gamba	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Vox Celeste	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Koppelflute	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Flute Twelfth	2 ² / ₃ '	○	○	○	○	○	○	○	○	○	○	○	○	○
Waldflute	2'	○	○	○	○	○	○	○	○	○	○	○	○	○
Tierce	1 ³ / ₅ '	○	○	○	○	○	○	○	○	○	○	○	○	○
Nazard	1 ¹ / ₃ '	○	○	○	○	○	○	○	○	○	○	○	○	○
Scharff	III	○	○	○	○	○	○	○	○	○	○	○	○	○
Cromorne	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Oboe	8'	○	○	○	○	○	○	○	○	○	○	○	○	○

GREAT

Bourdon	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Principal	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Stopped Flute	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Gamba	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Open Flute	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Twelfth	2 ² / ₃ '	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	2'	○	○	○	○	○	○	○	○	○	○	○	○	○
Coronet	IV	○	○	○	○	○	○	○	○	○	○	○	○	○
Mixture	VII	○	○	○	○	○	○	○	○	○	○	○	○	○
Trumpet	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Trumpet	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Vox Humana	8'	○	○	○	○	○	○	○	○	○	○	○	○	○

ACCESSORIES

Swell-Great	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Great-Pedal	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Swell-Pedal	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Tremulant Great	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Tremulant Swell	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Chorus	○	○	○	○	○	○	○	○	○	○	○	○	○	○

Registration examples Opus 30 AGO

		<i>ppp</i>	<i>pp</i>	<i>p</i>	<i>mf</i>	<i>f</i>	<i>ff</i>	<i>t</i>	Solo on Great	Solo on Swell	Trio 1	Trio 2	Romantic	Plenum
PEDAL														
Principal	16'	○	○	○	○	●	●	●	○	○	○	○	○	●
Subbass	16'	●	●	●	●	●	●	●	●	●	●	●	●	●
Octave	8'	○	○	○	●	●	●	●	○	○	●	○	○	●
Gedackt	8'	○	○	●	●	●	●	●	●	●	○	●	●	○
Choralbass	4'	○	○	○	○	○	●	●	○	○	○	○	○	●
Nachthorn	2'	○	○	○	○	○	●	●	○	○	○	○	○	●
Contra Trumpet	16'	○	○	○	○	○	○	●	○	○	○	○	○	○
Trumpet	8'	○	○	○	○	○	●	●	○	○	○	○	○	○
SWELL														
Principal	8'	○	○	○	●	●	●	●	○	○	○	○	○	●
Rohrflute	8'	○	●	●	●	●	●	●	●	●	●	●	●	○
Viola di Gamba	8'	●	●	●	●	●	●	●	●	○	●	○	●	○
Vox Celeste	8'	○	○	○	○	○	○	○	○	○	○	○	●	○
Octave	4'	○	○	○	●	●	●	●	○	○	●	○	○	●
Koppelflute	4'	○	○	●	●	●	●	●	●	●	○	○	○	○
Flute Twelfth	2 ² / ₃ '	○	○	○	○	●	●	●	○	●	○	●	○	○
Waldflute	2'	○	○	○	○	○	●	●	○	○	●	○	○	●
Nazard	1 ¹ / ₃ '	○	○	○	○	○	○	●	○	○	○	○	○	●
Cromorne	8'	○	○	○	○	○	●	●	○	○	○	○	○	○
Oboe	8'	○	○	○	○	○	○	●	○	●	○	○	○	○
GREAT														
Bourdon	16'	○	○	○	○	○	●	●	○	○	○	○	○	○
Principal	8'	○	○	○	●	●	●	●	●	○	●	○	○	●
Stopped Flute	8'	○	●	●	●	●	●	●	●	●	○	●	●	○
Gamba	8'	●	●	●	●	●	●	●	○	●	○	○	●	○
Octave	4'	○	○	○	●	●	●	●	○	○	●	○	○	●
Open Flute	4'	○	○	●	●	●	●	●	●	○	○	●	○	○
Twelfth	2 ² / ₃ '	○	○	○	○	○	●	●	●	○	○	○	○	●
Octave	2'	○	○	○	○	●	●	●	○	○	○	○	○	●
Cornet	IV	○	○	○	○	○	○	○	●	○	○	○	○	○
Mixture	VII	○	○	○	○	○	○	●	○	○	○	○	○	●
Trumpet	8'	○	○	○	○	○	●	●	○	○	○	○	○	○
CHOIR														
Bourdon	8'	●	●	●	●	●	●	●	●	●	●	●	●	●
Flute	4'	○	○	●	●	●	●	●	●	●	○	○	○	●
Nazard	2 ² / ₃ '	○	○	○	○	○	●	●	○	○	●	○	○	○
Flute	2'	○	○	○	○	●	●	●	○	○	●	○	○	●
Tierce	1 ³ / ₅ '	○	○	○	○	○	○	○	○	○	●	○	○	○
Sifflute	1'	○	○	○	○	○	○	●	○	○	○	●	○	●
Mixture	II-IV	○	○	○	○	○	●	●	○	○	○	○	○	●
Vox Humana	8'	○	○	○	○	○	●	●	○	○	○	○	○	○
ACCESSORIES														
Choir-Great		●	●	●	●	●	●	●	●	○	○	○	●	●
Swell-Great		●	●	●	●	●	●	●	●	○	○	○	●	●
Swell-Choir		●	●	●	●	●	●	●	●	○	○	○	●	●
Choir-Pedal		●	●	●	●	●	●	●	●	○	○	○	●	●
Great-Pedal		●	●	●	●	●	●	●	○	○	○	○	●	●
Swell-Pedal		●	●	●	●	●	●	●	●	○	○	○	●	●
Tremulant Choir		○	○	○	○	○	○	○	○	○	○	○	●	○
Tremulant Great		○	○	○	○	○	○	○	○	○	○	○	●	○
Tremulant Swell		○	○	○	○	○	○	○	○	○	○	○	●	○
Chorus		○	○	○	○	○	○	○	○	○	○	○	●	○

Personal registrations Opus 30 AGO

PEDAL

Principal	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Subbass	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Gedackt	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Choralbass	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Nachthorn	2'	○	○	○	○	○	○	○	○	○	○	○	○	○
Contra Trumpet	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Trumpet	8'	○	○	○	○	○	○	○	○	○	○	○	○	○

SWELL

Principal	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Rohrflute	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Viola di Gamba	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Vox Celeste	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Koppelflute	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Flute Twelfth	2 ² / ₃ '	○	○	○	○	○	○	○	○	○	○	○	○	○
Waldflute	2'	○	○	○	○	○	○	○	○	○	○	○	○	○
Nazard	1 ¹ / ₃ '	○	○	○	○	○	○	○	○	○	○	○	○	○
Cromorne	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Oboe	8'	○	○	○	○	○	○	○	○	○	○	○	○	○

GREAT

Bourdon	16'	○	○	○	○	○	○	○	○	○	○	○	○	○
Principal	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Stopped Flute	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Gamba	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Open Flute	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Twelfth	2 ² / ₃ '	○	○	○	○	○	○	○	○	○	○	○	○	○
Octave	2'	○	○	○	○	○	○	○	○	○	○	○	○	○
Cornet	IV	○	○	○	○	○	○	○	○	○	○	○	○	○
Mixture	VII	○	○	○	○	○	○	○	○	○	○	○	○	○
Trumpet	8'	○	○	○	○	○	○	○	○	○	○	○	○	○

CHOIR

Bourdon	8'	○	○	○	○	○	○	○	○	○	○	○	○	○
Flute	4'	○	○	○	○	○	○	○	○	○	○	○	○	○
Nazard	2 ² / ₃ '	○	○	○	○	○	○	○	○	○	○	○	○	○
Flute	2'	○	○	○	○	○	○	○	○	○	○	○	○	○
Tierce	1 ³ / ₅ '	○	○	○	○	○	○	○	○	○	○	○	○	○
Sifflute	1'	○	○	○	○	○	○	○	○	○	○	○	○	○
Mixture	II-IV	○	○	○	○	○	○	○	○	○	○	○	○	○
Vox Humana	8'	○	○	○	○	○	○	○	○	○	○	○	○	○

ACCESSORIES

Choir-Great		○	○	○	○	○	○	○	○	○	○	○	○	○
Swell-Great		○	○	○	○	○	○	○	○	○	○	○	○	○
Swell-Choir		○	○	○	○	○	○	○	○	○	○	○	○	○
Choir-Pedal		○	○	○	○	○	○	○	○	○	○	○	○	○
Great-Pedal		○	○	○	○	○	○	○	○	○	○	○	○	○
Swell-Pedal		○	○	○	○	○	○	○	○	○	○	○	○	○
Tremulant Choir		○	○	○	○	○	○	○	○	○	○	○	○	○
Tremulant Great		○	○	○	○	○	○	○	○	○	○	○	○	○
Tremulant Swell		○	○	○	○	○	○	○	○	○	○	○	○	○
Chorus		○	○	○	○	○	○	○	○	○	○	○	○	○